


# HOME DECORATORS COLLECTION

BF-25171 MARTHA STEWART LIVING MUDROOM CABINET 15"Hx20"Wx13"D

INV#19146













## ASSEMBLY INSTRUCTIONS

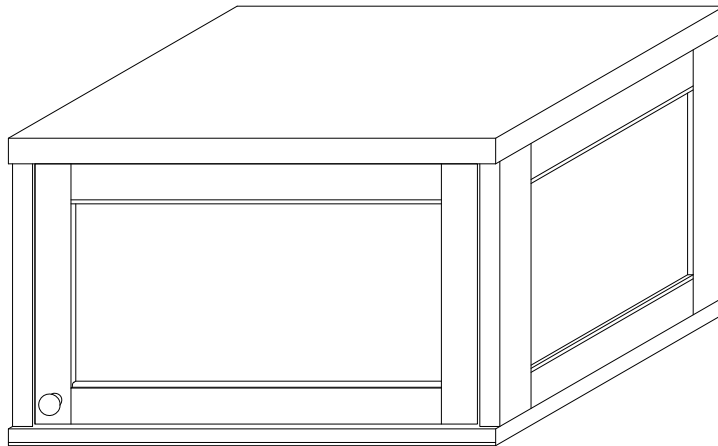











Made In China



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.



**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<b>A</b>  TOP PANEL-1PC	<b>B</b>  LEFT SIDE PANEL-1PC	<b>C</b>  RIGHT SIDE PANEL-1PC
<b>D</b>  BOTTOM PANEL-1PC	<b>E</b>  DOOR-1PC	<b>F</b>  BACK PANEL-1PC
<b>G</b>  CAM-BOLTS-8PCS	<b>H</b>  CAM-LOCKS-8PCS	<b>I</b> 7mm × 5/8"  SCREWS-14PCS
<b>J</b>  KNOB-1PC	<b>K</b> 8mm × 5/8"  SCREW-1PC	<b>L</b>  HINGES-2PCS

<b>M</b> $6\text{mm} \times 1/2''$  SCREWS-12PCS	<b>N</b>  MAGNET-1PC	<b>O</b>  PLATES-2PCS
<b>P</b> $6\text{mm} \times 5/8''$  SCREWS-8PCS	<b>Q</b>  FEMALE MAGNET-1PC	<b>R</b> $5\text{mm} \times 1/2''$  SCREW-1PC
<b>S</b>  CAM-T00L-1PC	<b>T</b>  HOOKS-4PCS	<b>U</b>  PLASTIC BELTS-2PCS
<b>V</b> $6\text{mm} \times 3/4''$  SCREWS-4PCS	<b>W</b>  GECKOS-4PCS	<b>X</b> $7\text{mm} \times 7/8''$  SCREWS-4PCS




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

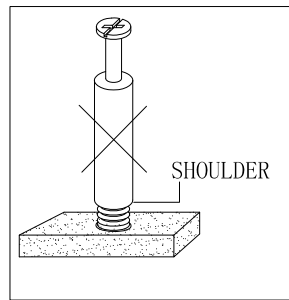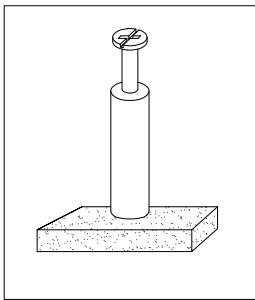


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

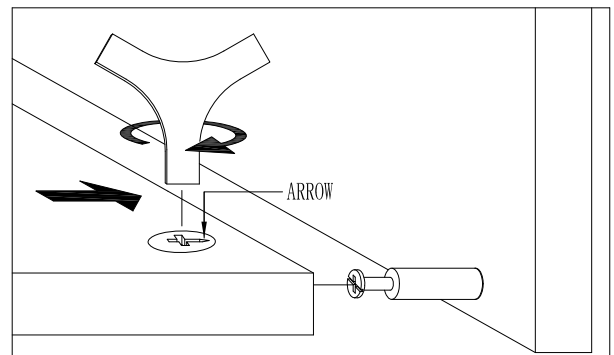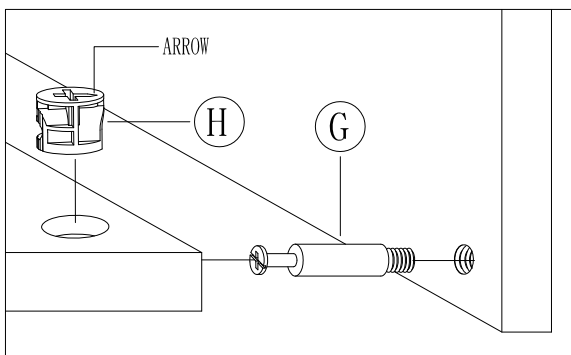


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

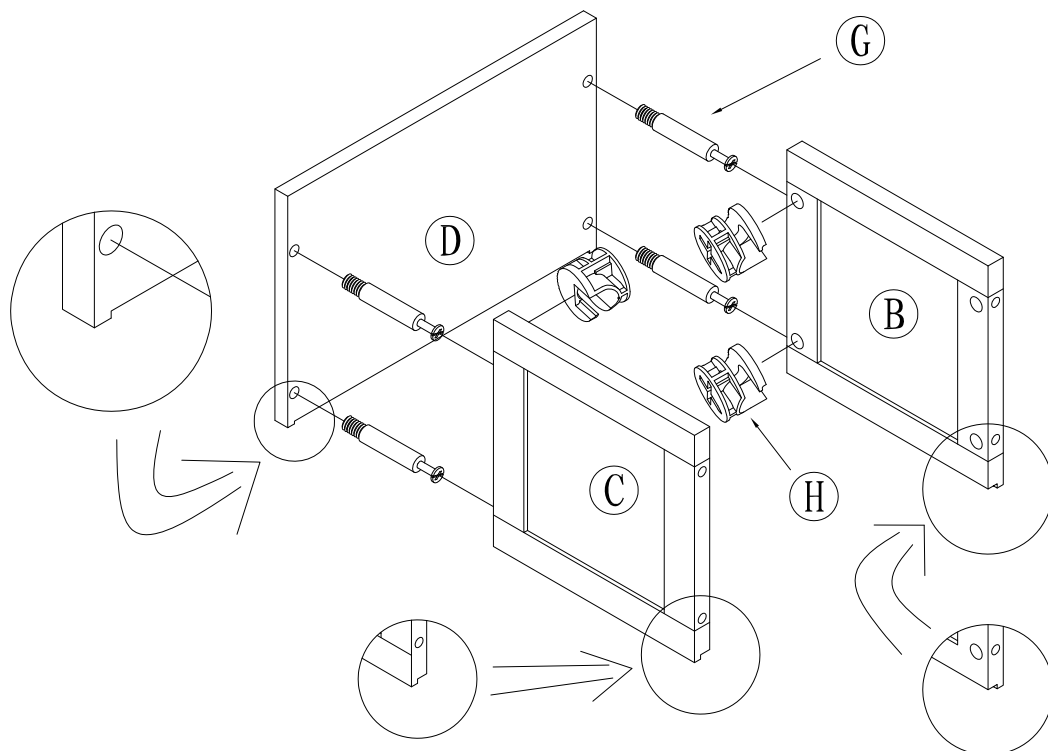


1). ASSEMBLE THE BOTTOM PANEL (D).

- ROTATE 4 CAM-BOLTS (G) INTO THE HOLES IN THE BOTTOM PANEL (D).
- PLACE CAM-BOLTS (G) INTO THE HOLES IN THE SIDE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (H).

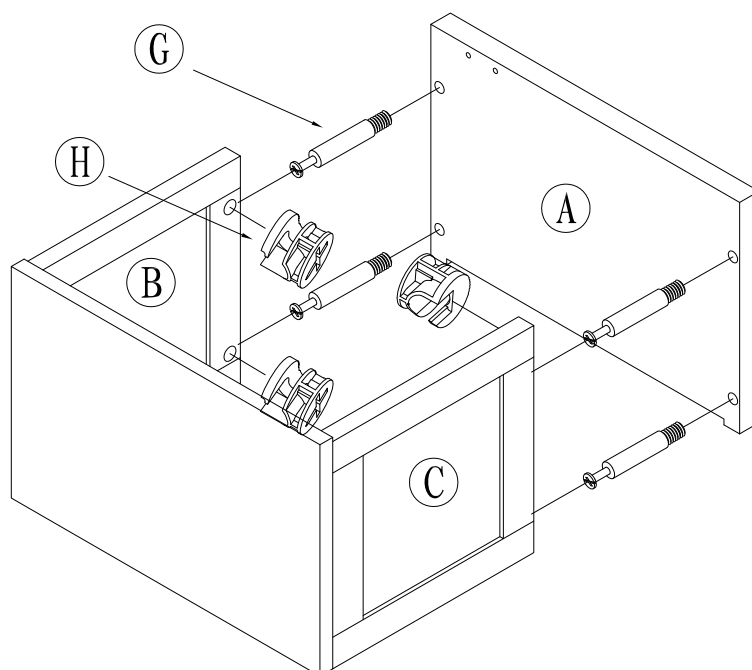


2). ASSEMBLE THE TOP PANEL (A).

- ROTATE 4 CAM-BOLTS (G) INTO THE HOLES IN THE TOP PANEL (A).
- PLACE CAM-BOLTS (G) INTO THE HOLES IN THE SIDE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (H).

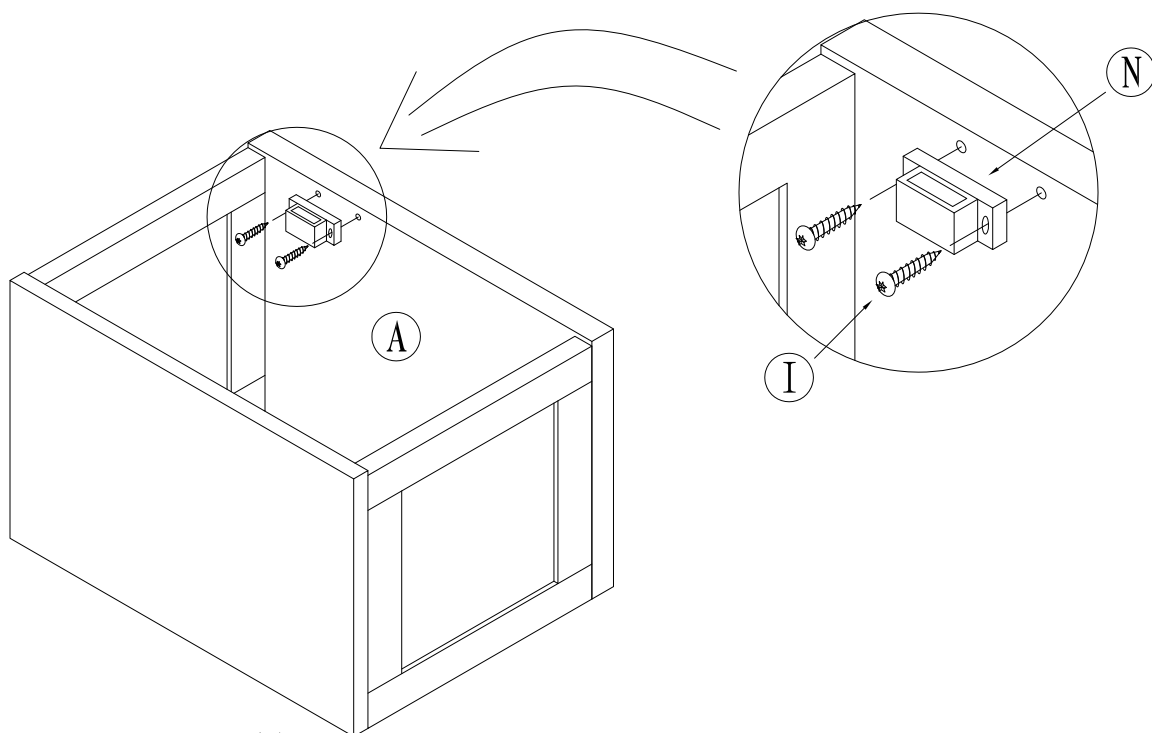


### 3). ASSEMBLE THE MAGNET (N).

- ATTACH THE MAGNET (N) TO TOP PANEL (A) USING 2 SCREWS (I).

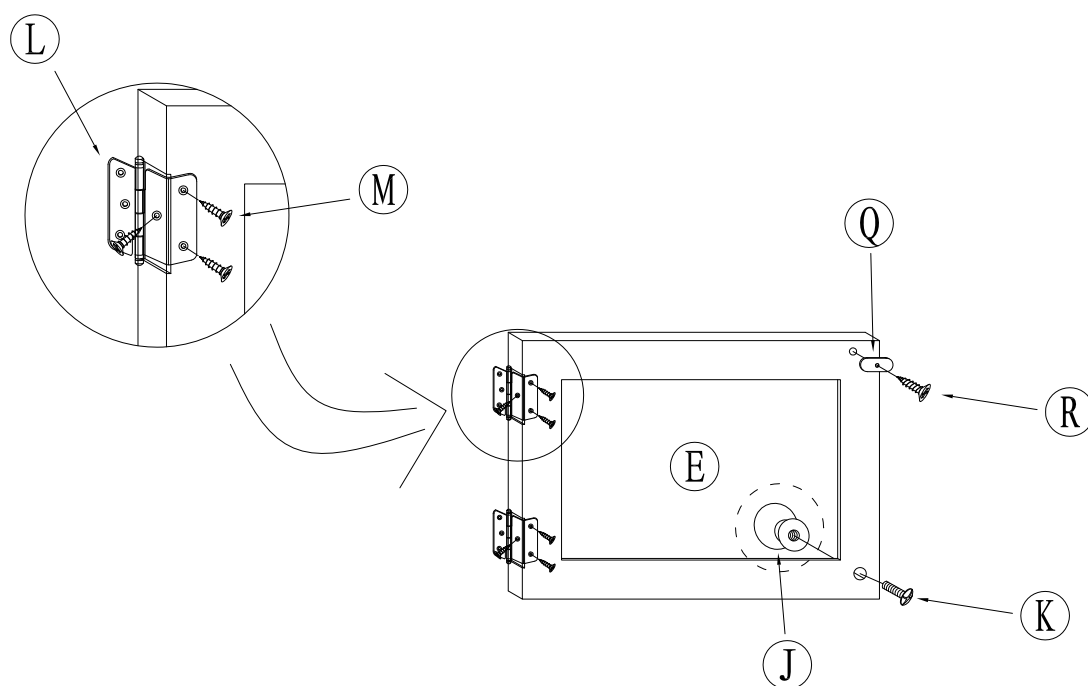

### 4). ASSEMBLE THE DOOR (E).

- ATTACH 1 KNOB (J) TO DOOR (E) USING 1 SCREW (K).
- ATTACH 1 FEMALE MAGNET (Q) TO DOOR (E) USING 1 SCREW (R).
- ATTACH 2 HINGES (L) TO DOOR (E) USING 6 SCREWS (M).

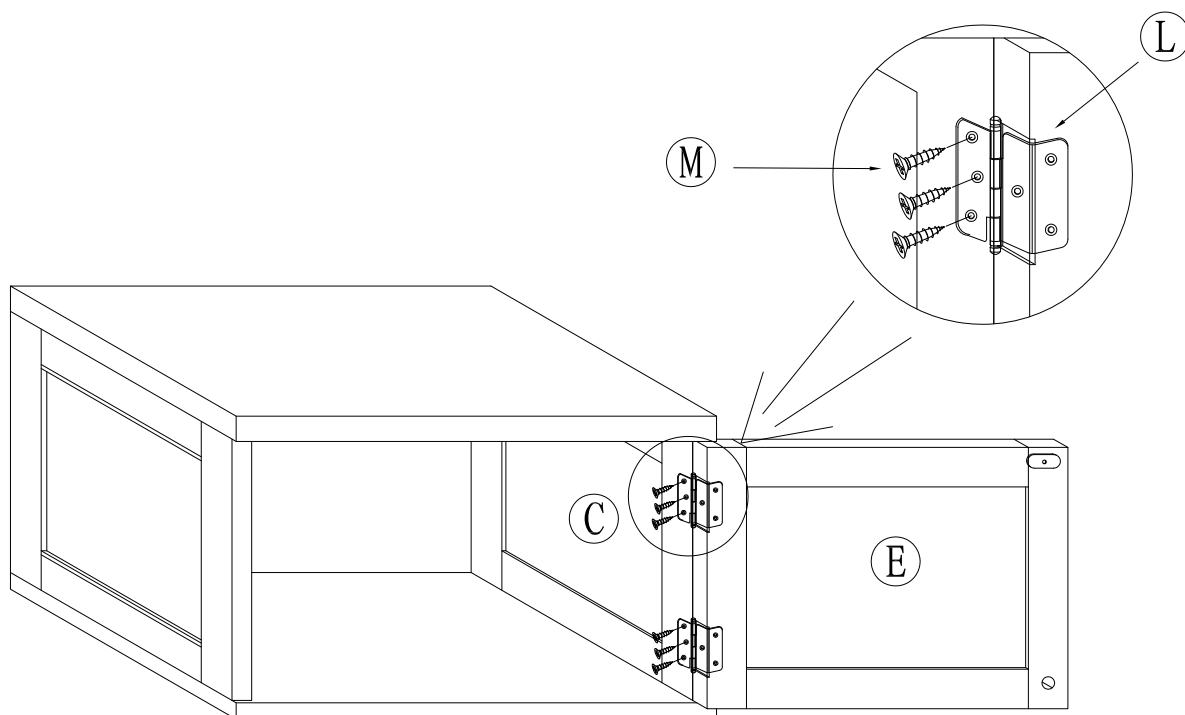


5). ASSEMBLE THE DOOR(E).

- ATTACH THE DOOR(E) TO RIGHT SIDE PANEL(C) USING 6 SCREWS(M).



## Warning





The anti-tip hardware must be used as part of assembly!

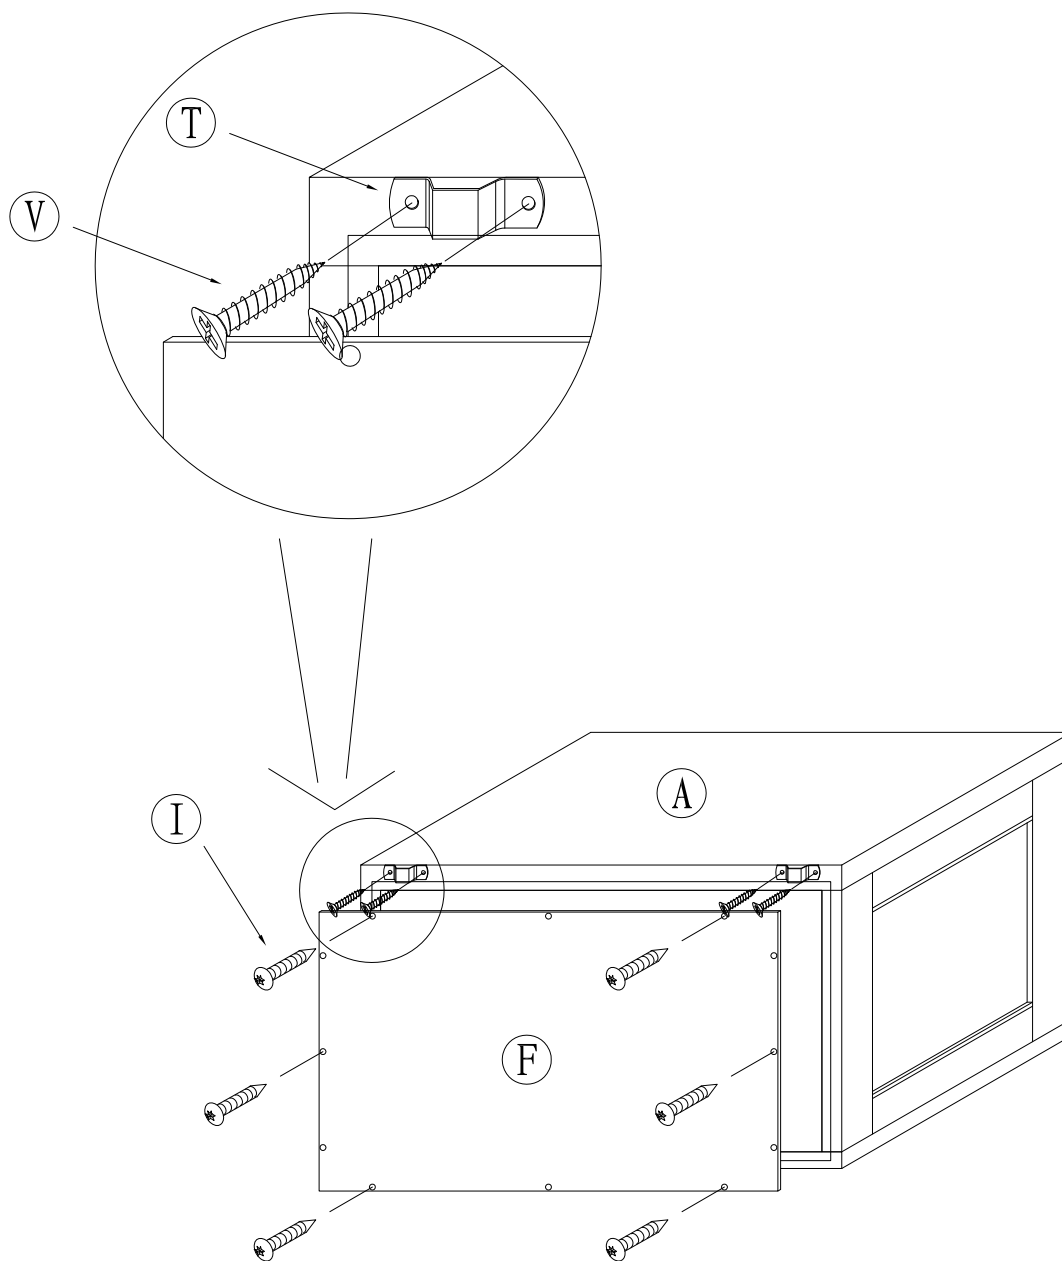

### 6). ASSEMBLE THE BACK PANEL (F) AND HOOKS (T).



- ATTACH THE BACK PANEL (F) USING 12 SCREWS (I).
- ATTACH THE HOOKS (T) TO TOP PANEL (A) USING 4 SCREWS (V).



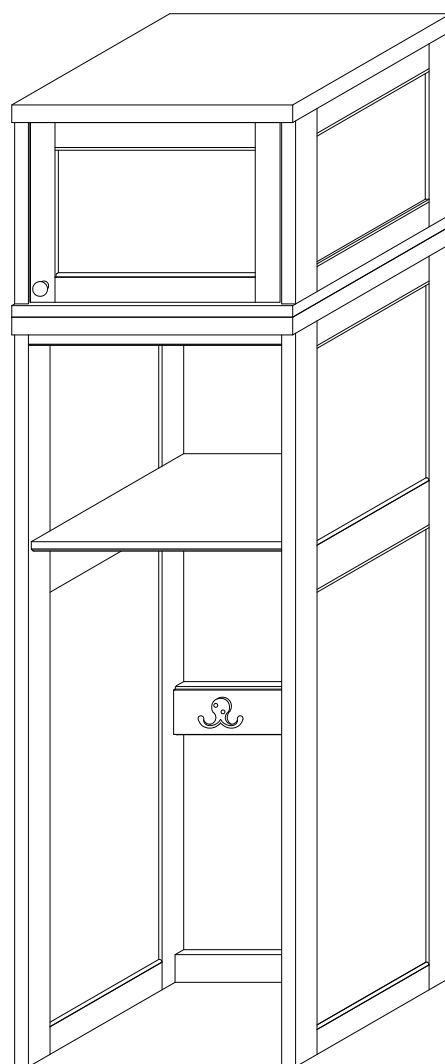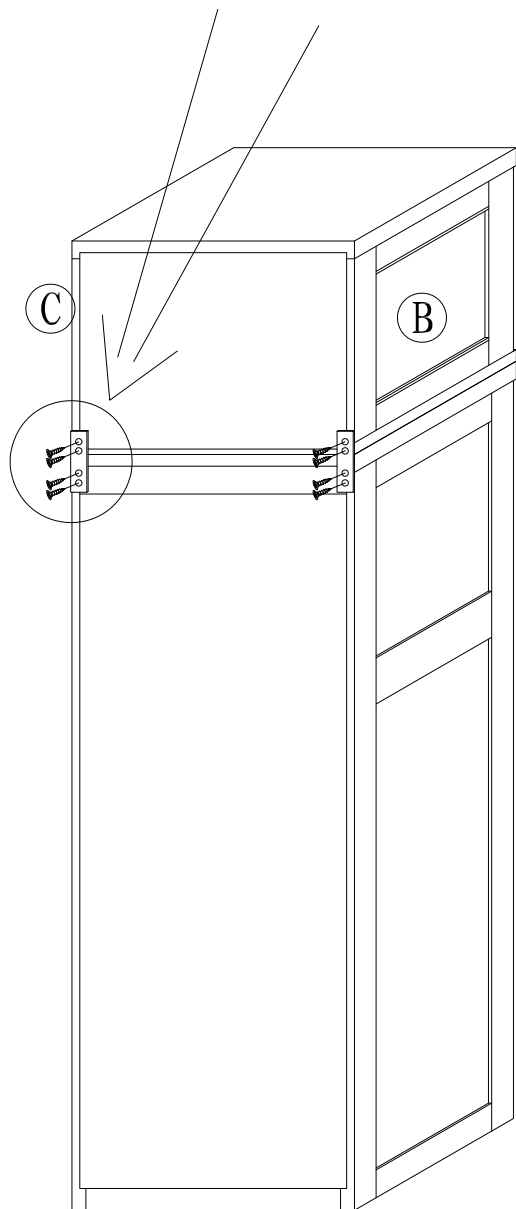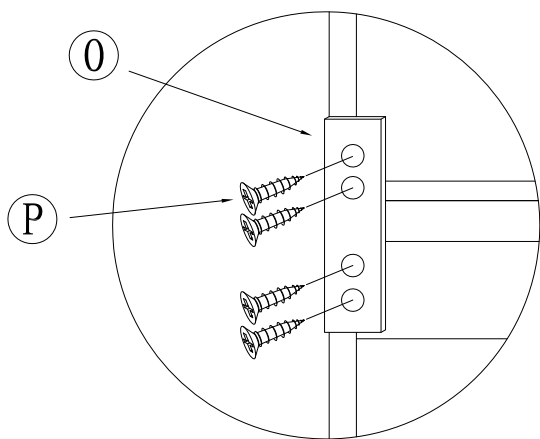

7). ASSEMBLE THE PLATES (O).

- ATTACH THE PLATES (O) TO PANEL (B/C) USING 8 SCREWS (P).

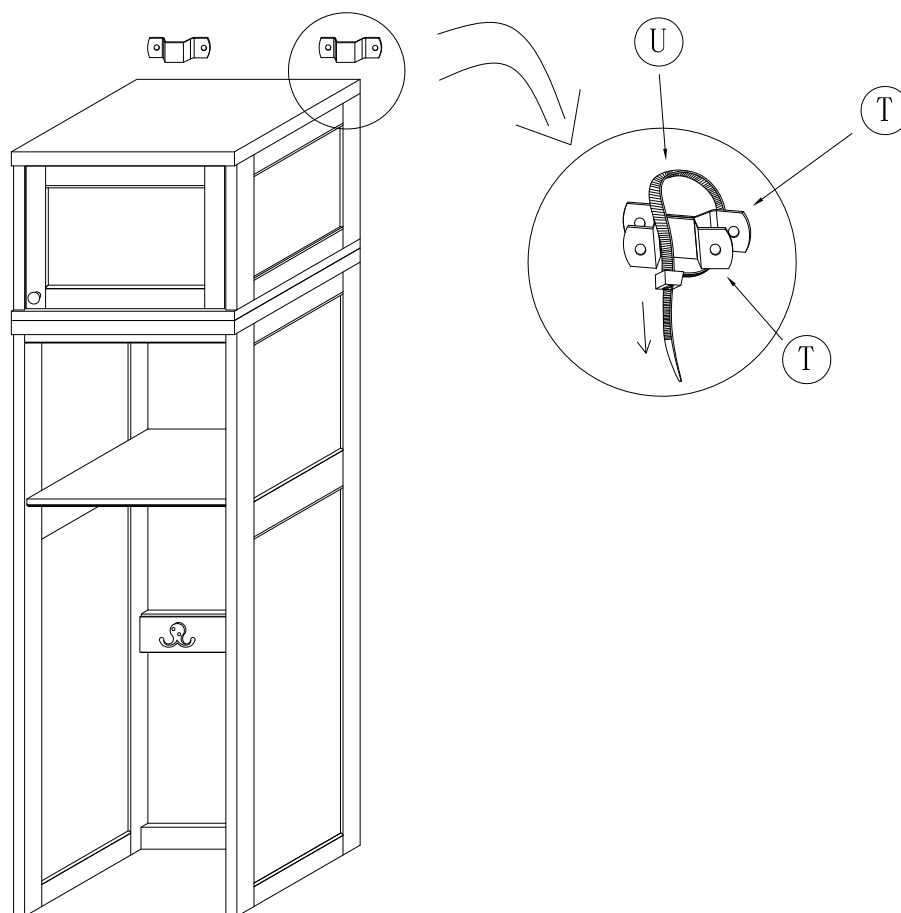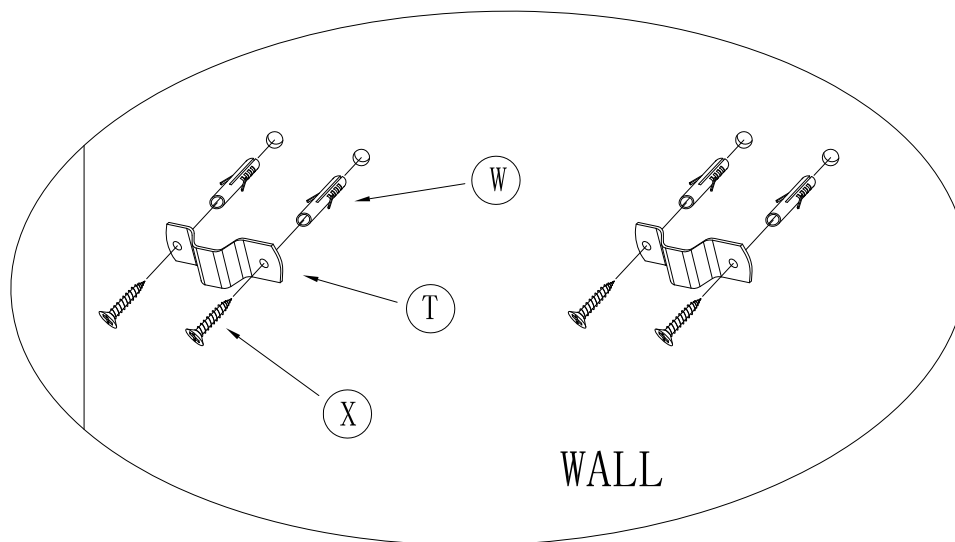

#### 8). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(W) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(X) INTO THE GECKOS(W).
- CONNECT THE TWO HOOKS(T) WITH A PLASTIC BELT(U).